


PURE

SK204

PULL OUT SWIVEL KITCHEN TAP

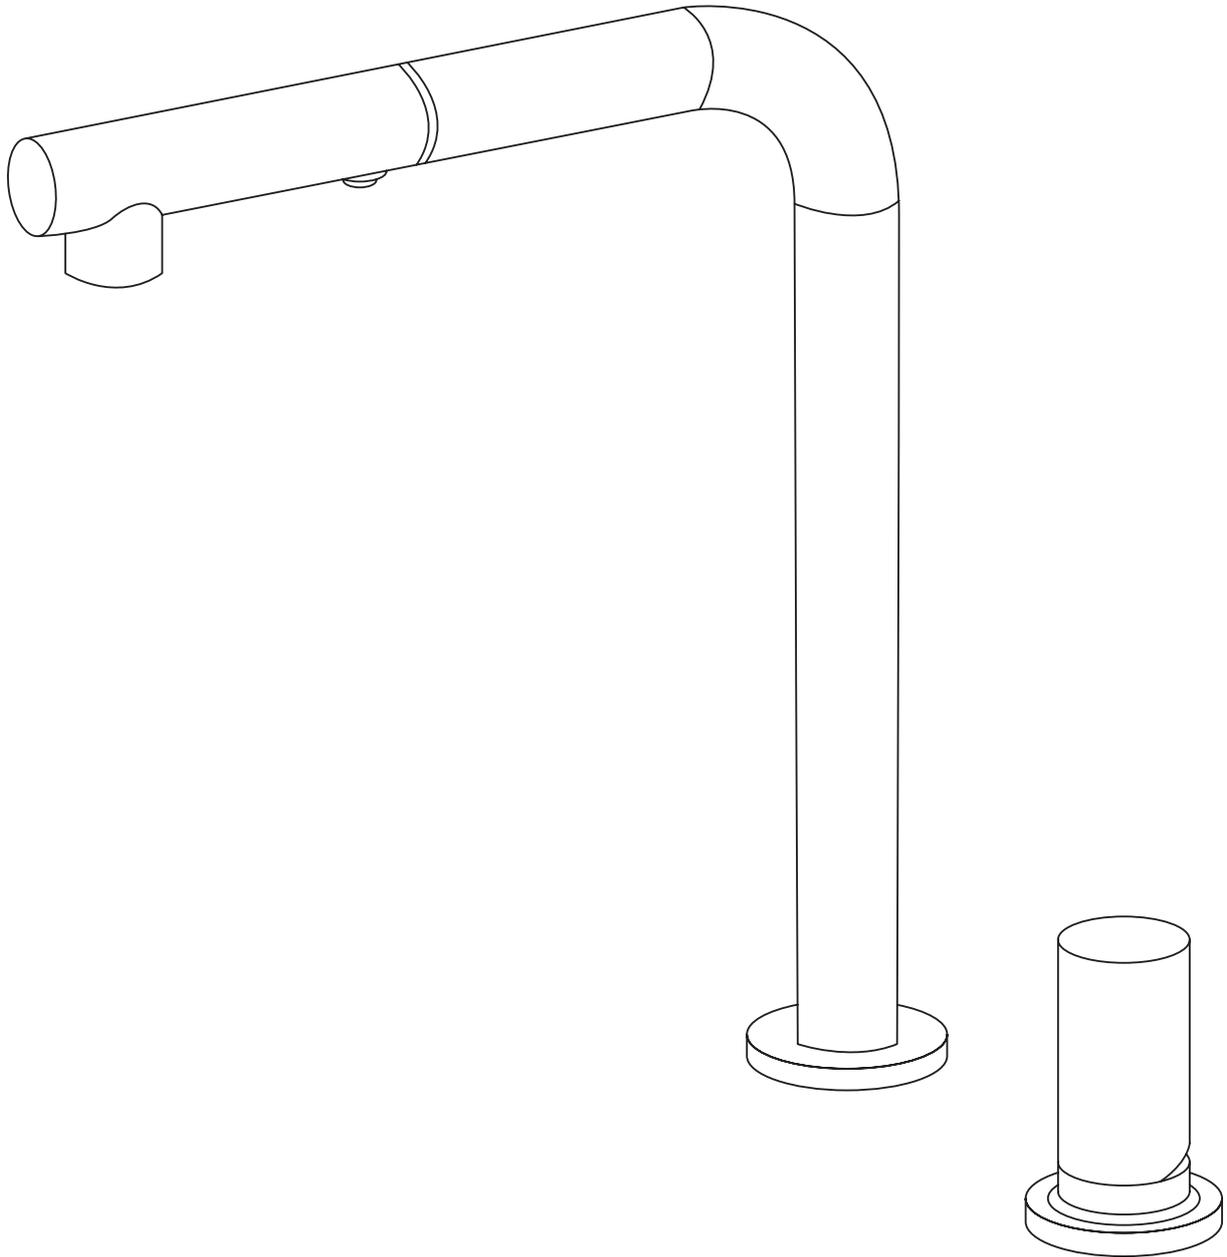

EN INSTALLATION AND CARE GUIDE

Please retain for future reference

LUSO

INTRODUCTION


Thank you for purchasing the Pure Pull Out Swivel Kitchen Tap.

Please read this guide carefully before installing, using and cleaning this product, and retain it for future reference. Please also note that this mixer tap has been fully tested before being dispatched, which may mean there is water residue on some of the parts.

If you have any queries in relation to this product or guide, please contact our Customer Service team on 020 3370 4057.

PRODUCT KIT

- A** Mixer Body
- B** Fixings (x2)
- C** Hot & Cold Pipes (x2)
- D** Gravity Ball
- E** Flexible Hose
- F** Spout

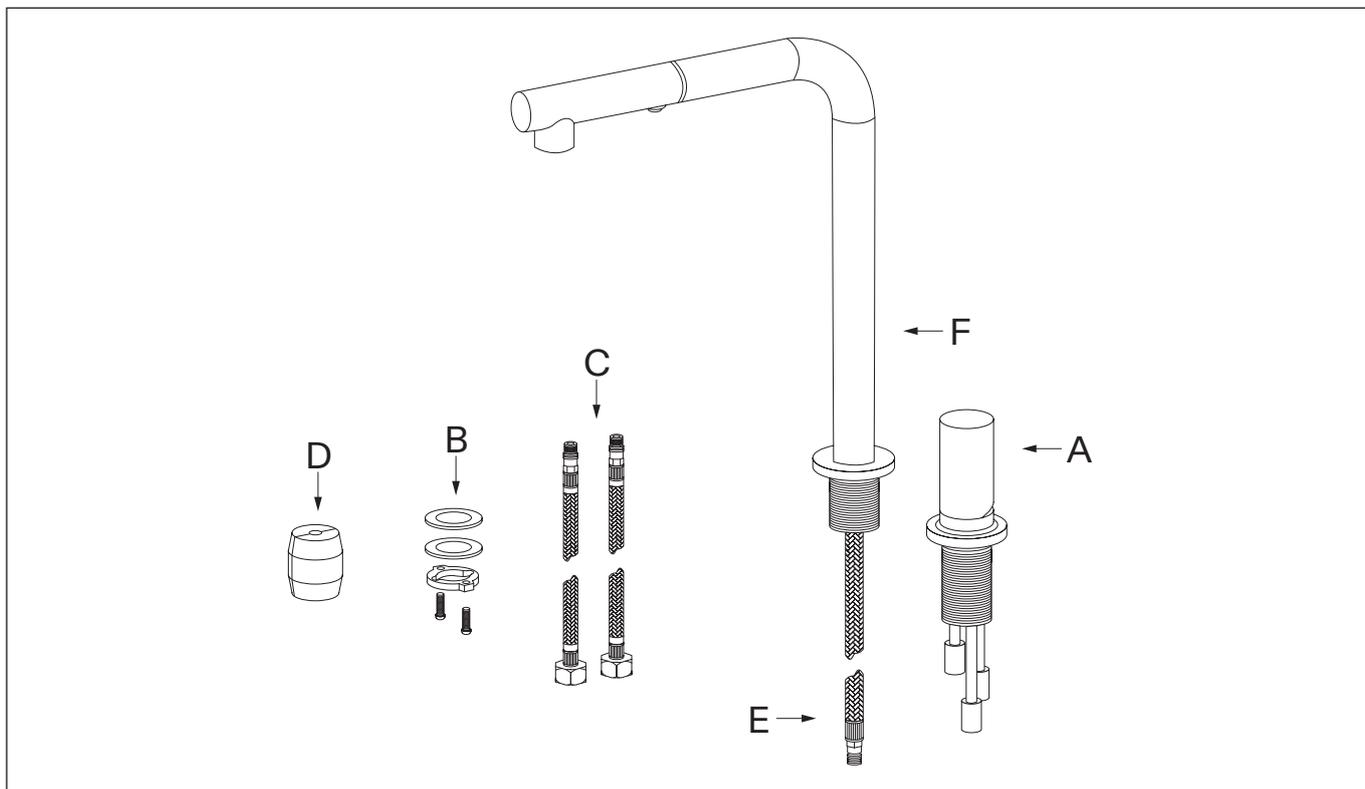


INSTALLATION STEPS

Before installation, please note that this tap is designed for deck mounting only, and we recommend that it is installed by a fully qualified plumber. It is suitable for use on all boiler systems including pumped, gravity and combination boilers to a maximum pressure of 5 bar - pressure above this may require the fitting of reducer valves. Please also note that failure to flush your plumbing system as part of the installation process will void the product guarantee.

In addition, you must fully test the product before tiling and/or plastering, etc as Lusso will not be held responsible for any costs involved in the removal of the tap if you find there is a fault.

- 1 Carefully check the dimension drawing and mark the position for the tap. Next, remove the nuts and metal washers from the fixing sections.
- 2 Sit the spout and mixer body in place, ensuring that the distance between them is no less than 120mm, and put the metal washers and nuts into position underneath the deck surface.
- 3 Install the hot and cold pipes then securely tighten the nuts and screws for the spout and mixer body.
- 4 Install the gravity ball to the pull out hose and adjust it to ensure that the pull out feature works correctly. Finally, connect the hot and cold pipes to your main water pipes and test the tap.

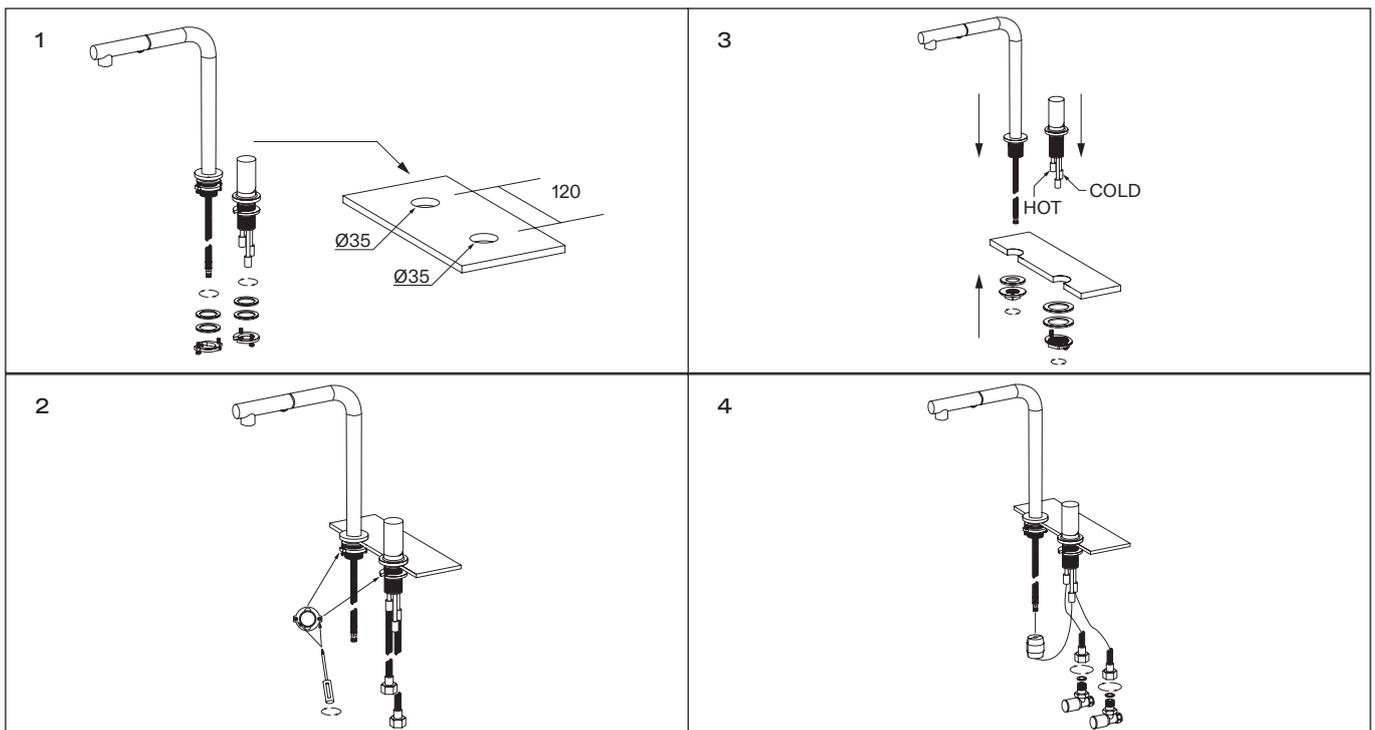

TROUBLESHOOTING

Why is the tap producing hot water when cold is selected, and vice versa?

It's likely that the hot and cold pipes have not been connected the right way around - please check and amend.

There is a leak from the top of the tap - what should I do?

In this instance, the cartridge may have become loose during installation. To tighten it, firstly remove the decorative button from the lever body, then use the allen key to remove the lever. Next, unscrew the dome shaped part to reveal the cartridge fixing nut, and tighten the nut using bent needle nose pliers to create a seal and stop the leak. Once complete, reassemble the tap.

What could cause a fluctuating flow rate or low/no flow from the valve?

This may be due to either a blockage in the system, incorrect operating conditions, or a clog in the aerator. To unclog the aerator, simply unscrew it, rinse it with water, and reinstall it - if the problem persists, please consult with a qualified plumber.

How do I replace the cartridge?

Isolate the water to the tap, remove the decorative button from the lever body, then use the allen key to remove the lever. Next, remove the dome shaped part to reveal the cartridge fixing nut, use bent needle nose pliers to unscrew and remove the nut, then lift out the cartridge and replace it with a new one - ensuring that the holes are aligned - before reassembling the tap.

CARE INSTRUCTIONS

To clean and maintain the flawless finish of this product, please follow the below instructions. Improper maintenance will void your product guarantee.

✓ Clean with a damp cloth.

✗ Do not use acidic cleansers.

✗ Do not use abrasive cleansers or cloths.

Go to Lusso.com to activate your guarantee.

LUSO

Customer Care: 020 3370 4057

International: +44 20 3370 4057