

# LUSSO

## S T O N E

### Deck Mounted Basin Taps

### Installation & Maintenance Guide

#### Important Information

This product has been fully tested prior to it leaving the factory. In some cases you may find water residue on the parts.

To ensure you get the best use from this product, please read this installation guide thoroughly.

This product has been designed for single hole basins. The product is suitable for use on all boiler systems including pumped, gravity and combination boilers to a maximum pressure of 5 bar. Pressure above this may require the fitting of reducer valves.

We recommend that a fully qualified plumber install this product.

If you experience any difficulty with the installation or operation of this system, please refer to the Troubleshooting guide.

#### Tap Contents

1. Tap x 1
2. Fixings x 1
3. Hot & Cold Pipes x 2

#### Installation

Before installation, please make sure your system is suitable.

- Remove the nut and metal washer from the fixing section.
- Install the hot and cold pipes into the main body of the tap.
- Put the pipes through the hole in the sink one at a time and sit the tap in place.
- Slide the metal washer over the fixing thread on the underside of the basin.
- Tighten the nut to hold it in place.
- Connect the hot and cold pipes to your main water pipes and test the tap.

#### Maintenance and Care

This product is finished to a high standard. For cleaning, please use a damp cloth. No abrasive cleaning materials should be used. Any misuse will invalidate your guarantee.

## **Troubleshooting**

**Fault:** Hot is coming out when I select cold or vice versa

**Cause:** Hot and cold pipes are connected the wrong way around

**Fault:** Leak from the top of the tap

**Cause:** Cartridge has become loose during installation. See below on how to fix.

**Fault:** Fluctuating Flow Rate:

**Cause:** Possible blockage in the system or operating conditions is incorrect

**Fault:** Low or no flow from the valve

**Cause:** Possible blockage in the system, operating conditions is incorrect or there is a blockage in the system.

### **How to tighten the cartridge**

Remove the small cap from the lever and unscrew the lever using the Allen key provided.

Remove the lever and put it aside.

Remove the dome shaped part. Unscrew this with your hand and put it aside.

Tighten the brass nut under the dome part. This will stop the leak and create the seal.

Now you need to put the tap back together.

### **How to replace the cartridge**

Remove the small cap from the lever and unscrew the lever using the Allen key provided.

Remove the lever and put it aside.

Remove the dome shaped part. Unscrew this with your hand and put it aside.

Unscrew and remove brass nut under the dome part.

Lift out the cartridge and replace with the new one.

Now you need to put the tap back together.

Customer care: 0203 370 4057 (International +44 203 370 4057)