


LUSO


CLOUD QUADRANT SHOWER ENCLOSURE 900 (YP350)
Installation & Maintenance Guide

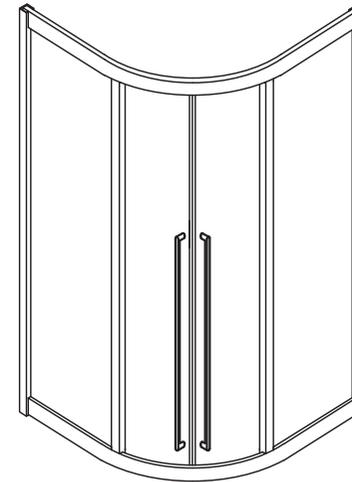

Customer Care: 0203 370 4057 (Option 2)
International: +44 203 370 4057 (Option 2)

PLEASE RETAIN THIS MANUAL
FOR FUTURE USE

YP350

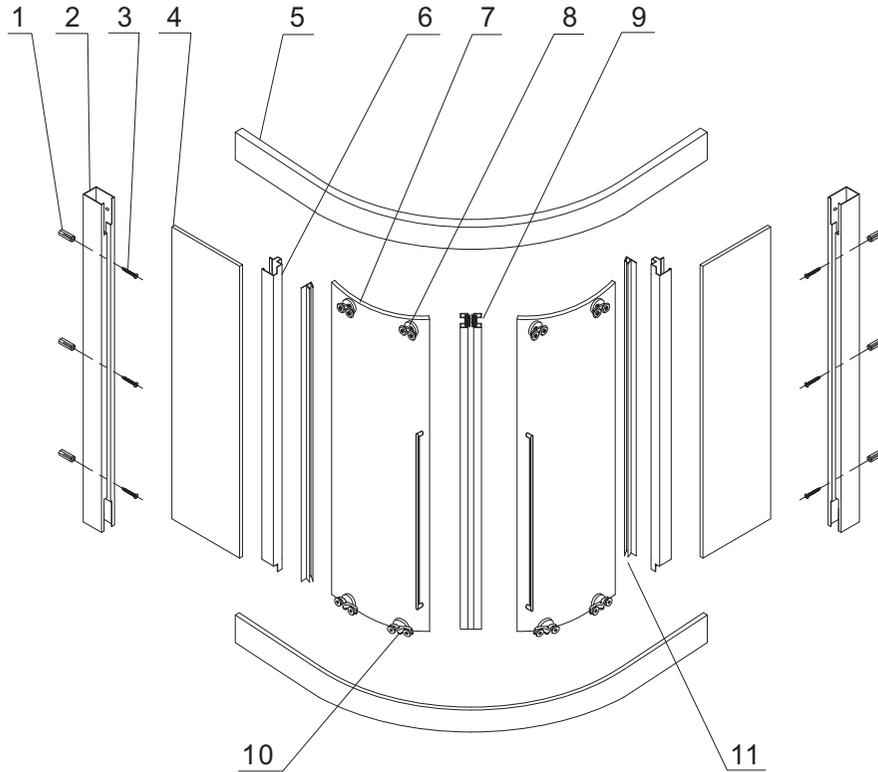

7. When installing the door magnets, ensure that the positioning is correct - the closed end should be at the bottom. Apply the clear silicone to the inner side of a door magnet strip. Fit it on the door glass one at a time from the bottom to the top. Carefully secure.

8. Fit the glass doors into the upper and bottom tracks, refer to figure (8) for the position of the rollers.

9. Close the glass doors, fit the vertical seals on the other side of the glass doors and make sure the apron sides are outward to create the seal when closing. Align the bottom of the seals to the bottom of the glass doors, then cut off the excess part from the top after confirming the install position.

10. Use a screwdriver to adjust the height of the top rollers to tightly fit the glass doors to the upper tracks. Tweak the rollers to align each edge of the glass doors and fixed panel glasses. Install the decorative caps on the exposed screws.

Please note that the top rollers **MUST** be tightened, otherwise the glass doors are at risk of falling from the rails.

11. Finally, install the handles on the glass doors and tighten them with the provided Allen key. Reinforce the bottom track and wall posts with clear silicone.

Accessories:

Wall Plug  6 Pieces	Wall Post  2 Pieces	Screw  ST4X30 6 Pieces	Fixed Panel Glass  2 Pieces	Top/Bottom Track  2 Pieces	Glass Profile Post  2 Pieces
Door Glass  2 Pieces	Top Roller  2 Sets	Door Magnet Strip  1 Set	Bottom Roller  4 Sets	Vertical Seal  2 Pieces	Allen Key  2 Pieces

Cloud Quadrant Shower Enclosure 900 (YP350)

1A. Position the bottom track onto the floor, fit the wall posts vertically onto the bottom track and use a spirit level to ensure that they are vertically aligned. With a pencil, mark the required drill holes on the wall.

1B. Move the wall posts to the side, and use an 8mm drill bit to drill the holes.

1C. Using a rubber mallet, lightly tap the provided wall plugs until they become level with the wall. Fit the wall posts over the wall plugs and screw the provided screws into place with a screwdriver.


2. Install the fixed panel glasses on both sides into the wall posts. Please refer to figure (2) of the install position.






3. Sit the upper track in place as shown in figure (3).

4. Fit the glass profile posts on the fixed panel glasses with both ends aligned with the upper and bottom tracks; carefully tighten it from the bottom to the top with a rubber mallet.


5. Tighten the screws on the connection between the wall posts and the upper track with the provided Allen key as shown in figure (5).

6. Install the top and bottom rollers to the locations on both sides of the glass doors, and fix them with screws as shown in figure (6).

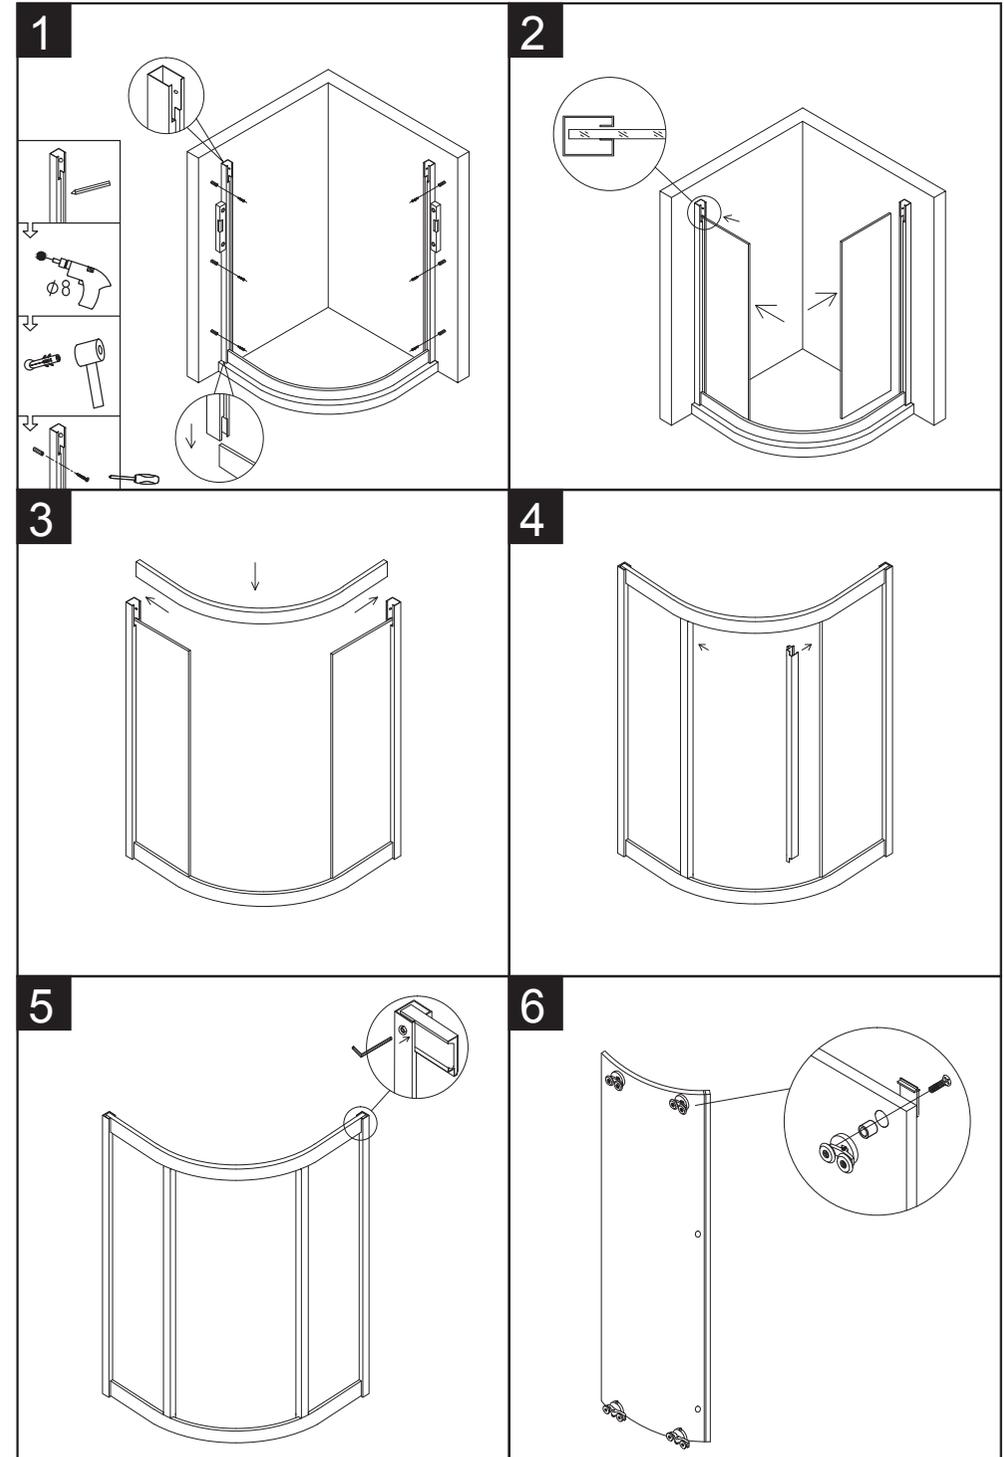

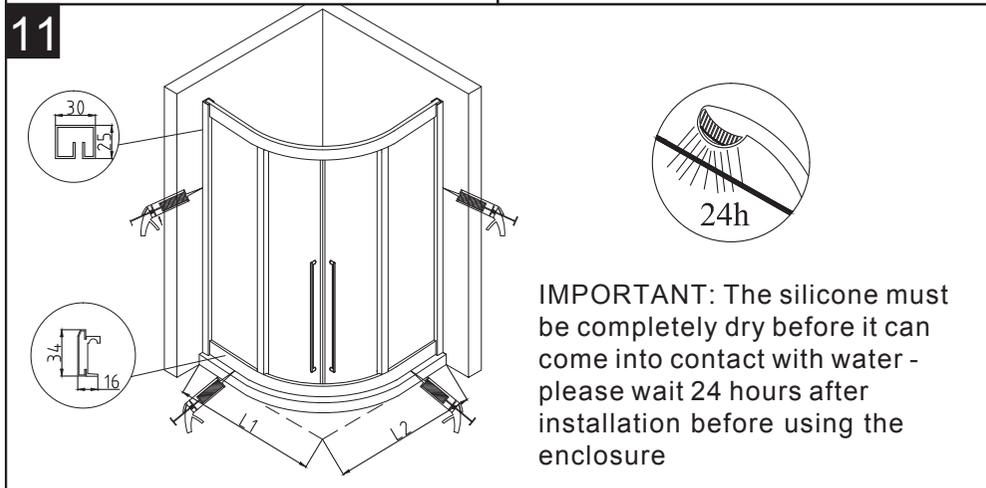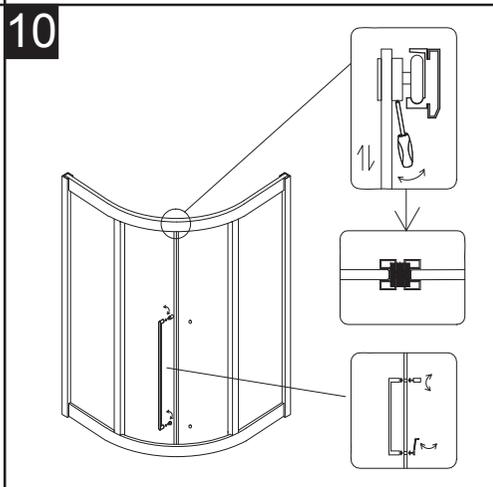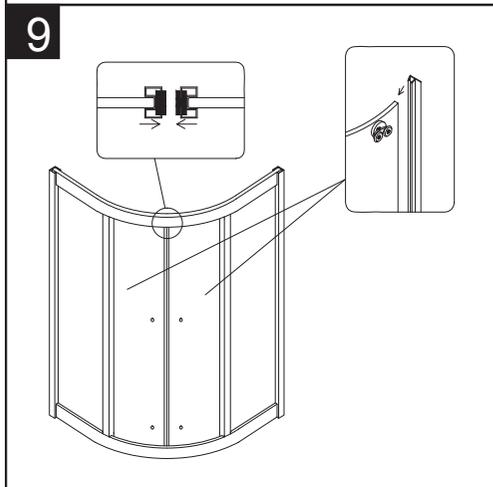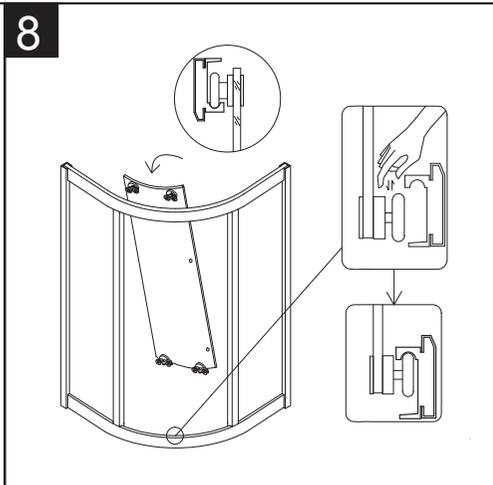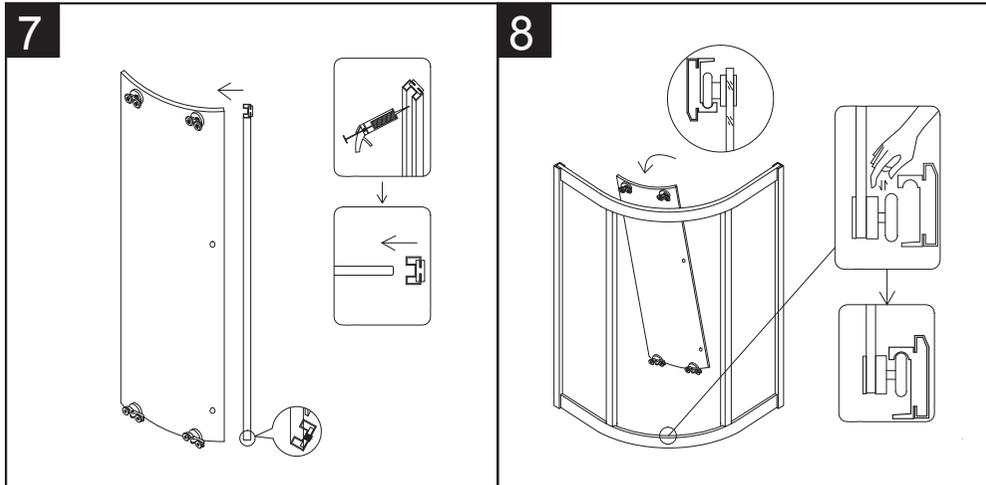

YP350

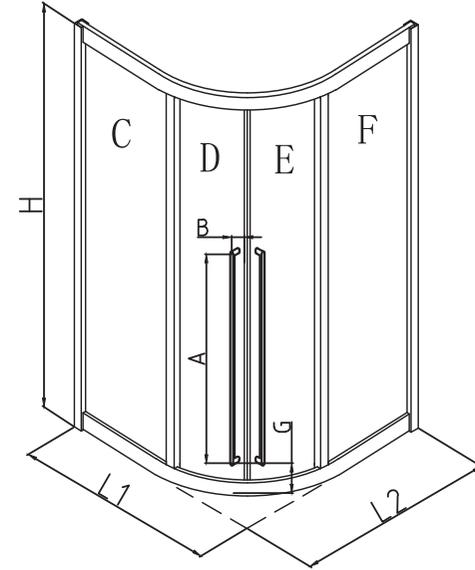

Shower Enclosure Width L1	Door Width D	Fixed Panel Glass Width C	Handle Length A	Handle Distance B	Handle Distance G
900	390	365	900	40	120
Shower Enclosure Width L2	Door Width E	Fixed panel Glass Width F	Handle Length A	Handle Distance B	Handle Distance G
900	390	365	900	40	120
Shower Enclosure Height H	Door Height	Fixed Panel Glass Height	Door Open Space		
1950	1940	1894	530		