
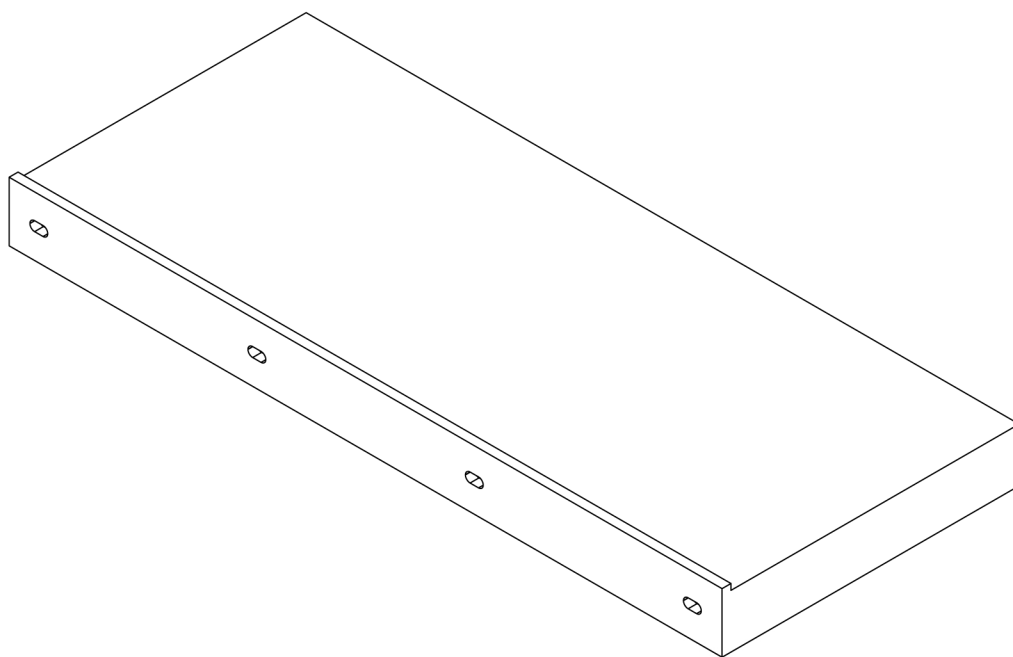


Counter Top 1200

Assembly Instructions

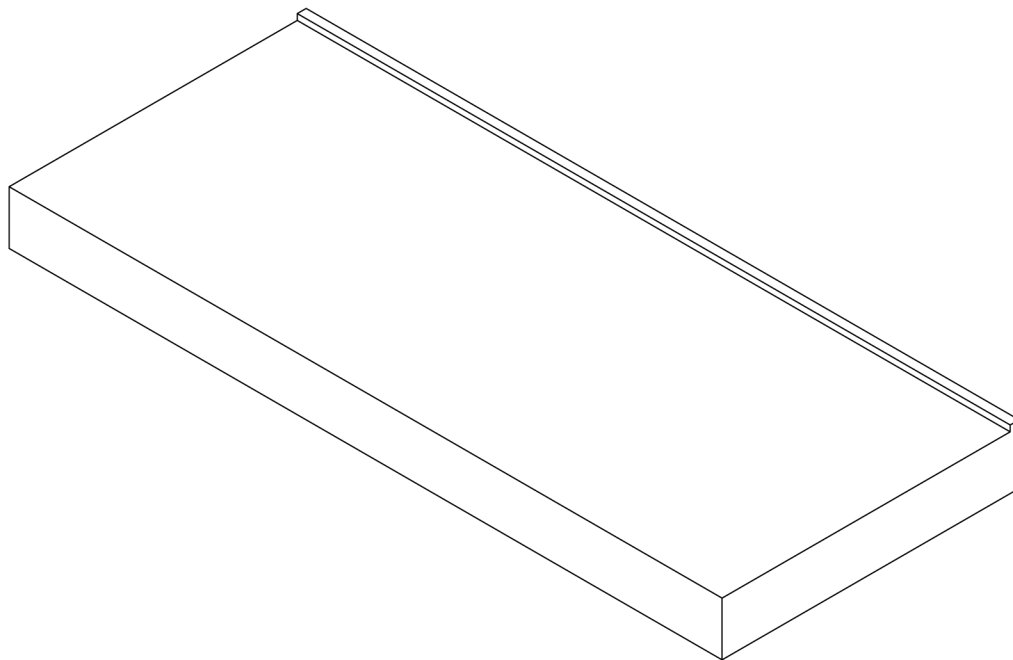


LUSO
S T O N E

Components


LUSSO
STONE

Bolt

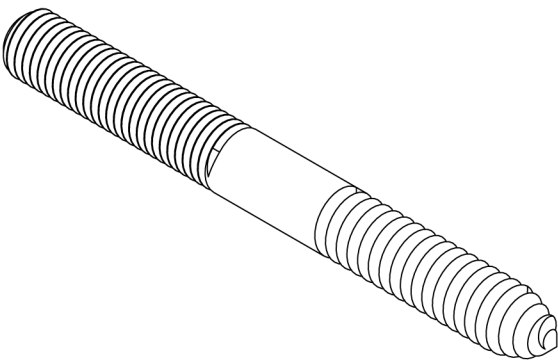


Amount: 4

Nut

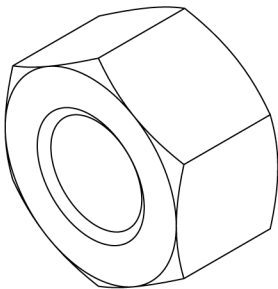


Amount: 4

Plastic Grommet

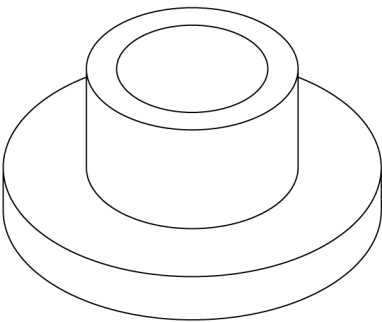


Amount: 4

Metal Washer

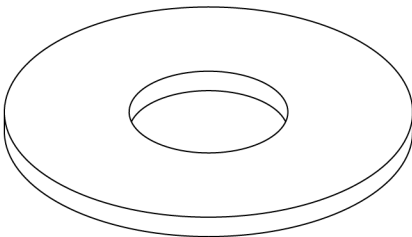

Amount: 4


<1>

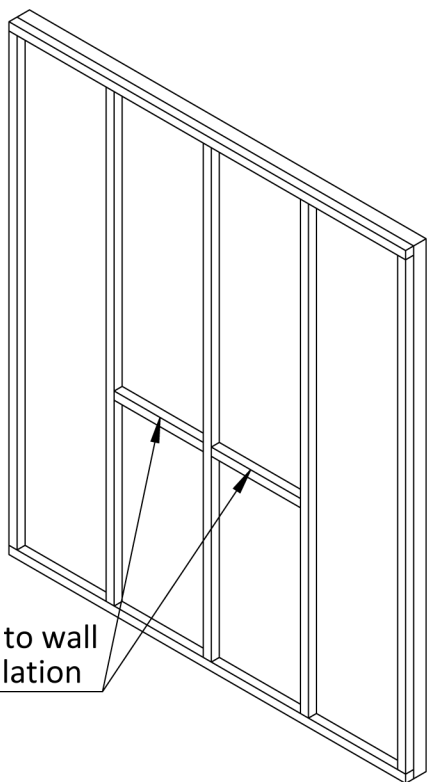

Add battens to wall
before installation


Note: Product can be mounted on
both concrete or timber-framed walls.

<2>

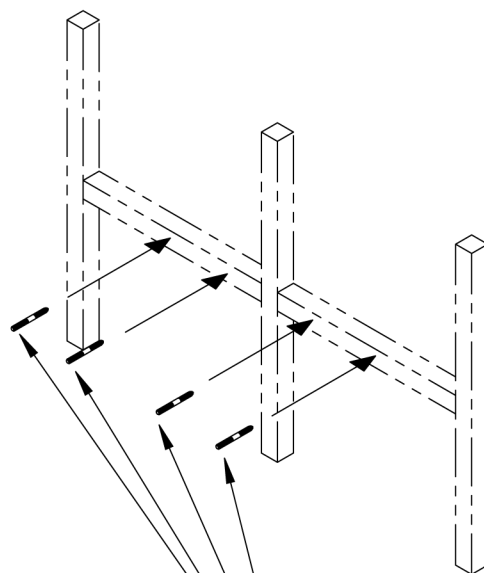


Add bolts to
plasterboard

<3>

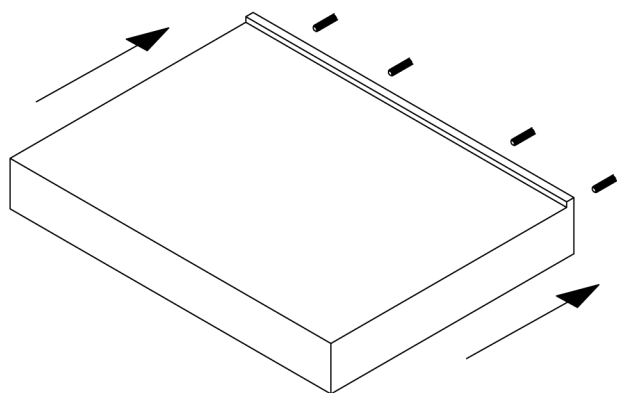


<4>





LUSSO
S T O N E

Assembly Complete

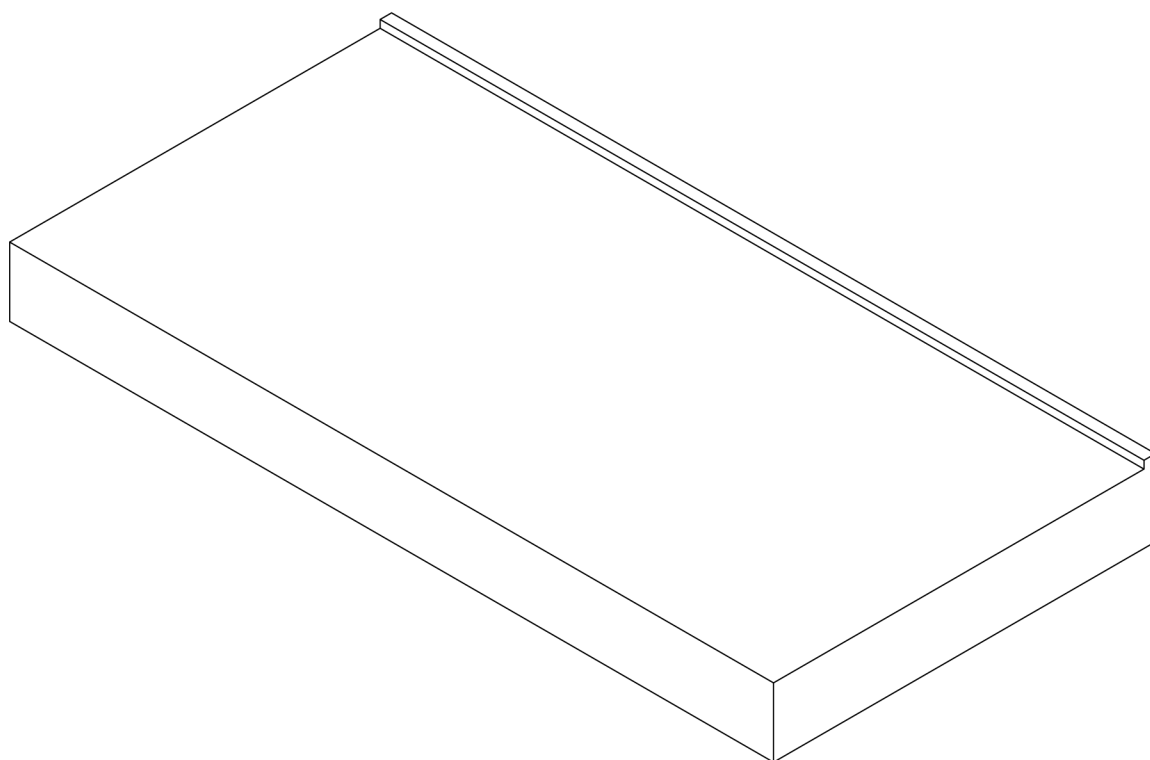

LUSO
S T O N E


Holes for basin waste and tap can be added using standard hand drill and a hole cutting tool.

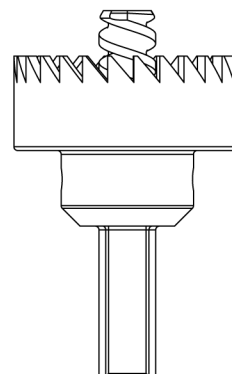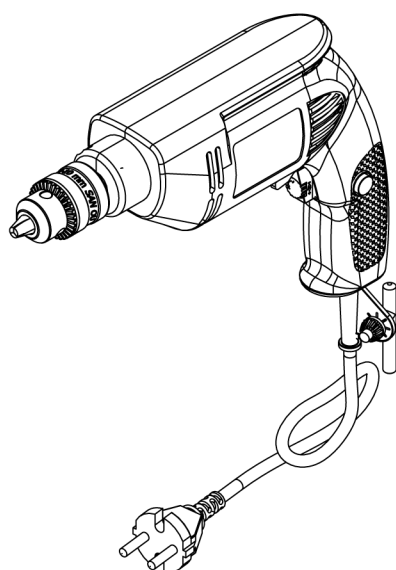

Recomended Hole Cutting Tool Sizes

44 mm tool for
basin waste hole

38 mm tool for
tap hole

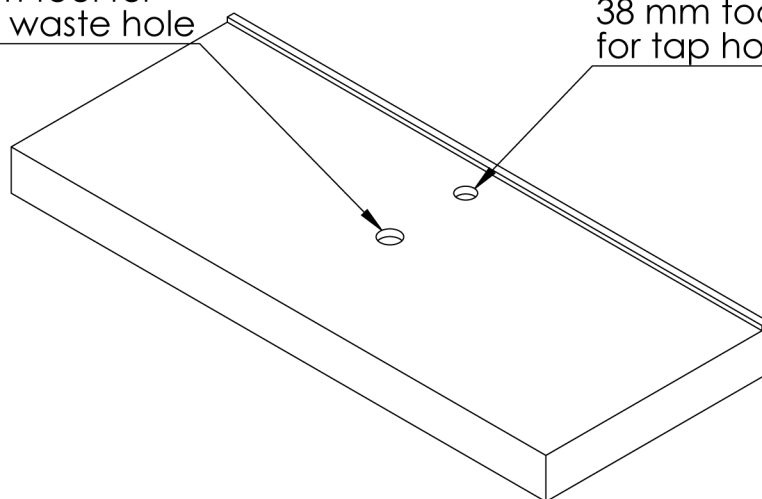

LUSSO
S T O N E