


LUXE

LUS20

WALL MOUNTED
BATH SHOWER TAP

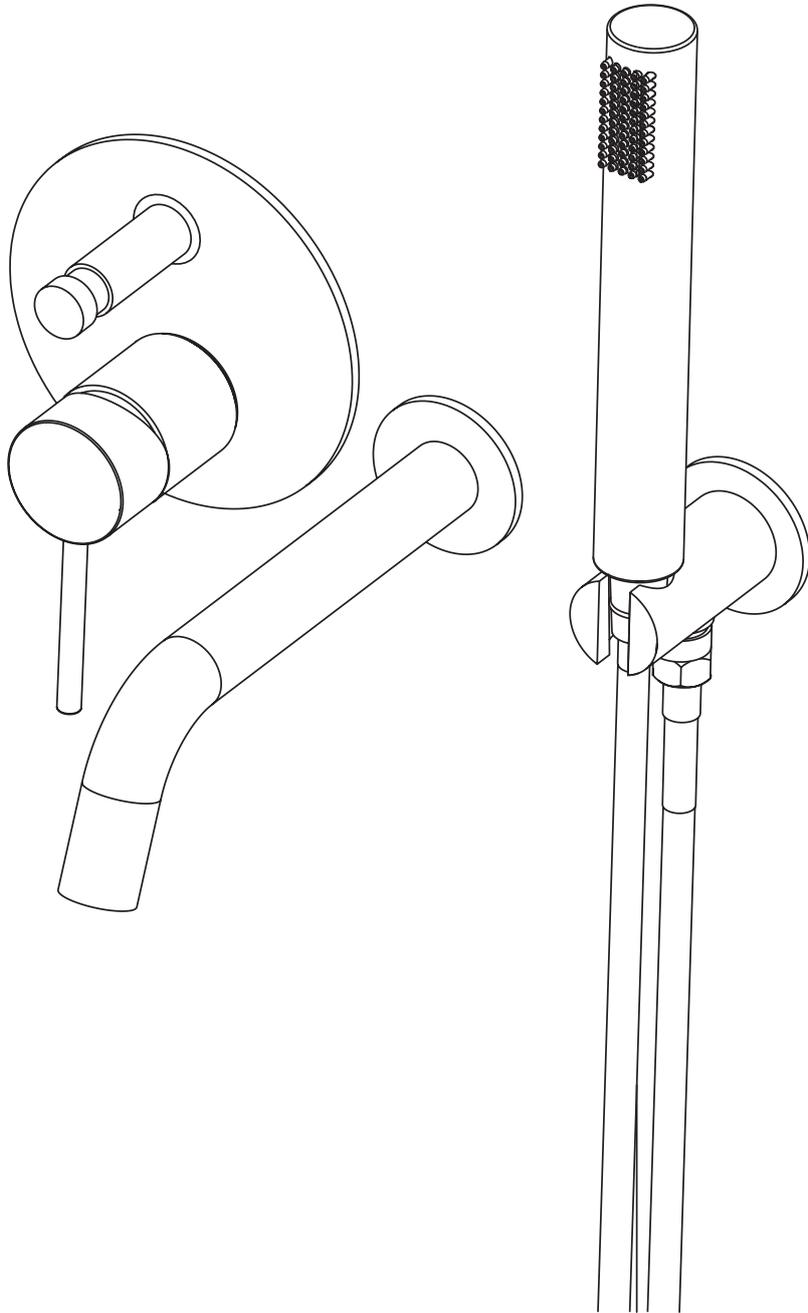

EN
INSTALLATION
AND CARE GUIDE

Please retain for future reference

LUSO

INTRODUCTION


Thank you for purchasing the Luxe Wall Mounted Bath Shower Tap.

Please read this guide carefully before installing, using and cleaning this product, and retain it for future reference. Please also note that this mixer tap has been fully tested before being dispatched, which may mean there is water residue on some of the parts.

If you have any queries in relation to this product or guide, please contact our Customer Service team on 020 3370 4057.

PRODUCT KIT

- A** Main Body
- B** Back Plate (x2)
- C** Spout
- D** Lever
- E** Handheld Shower
- F** Bracket
- G** Shower Hose

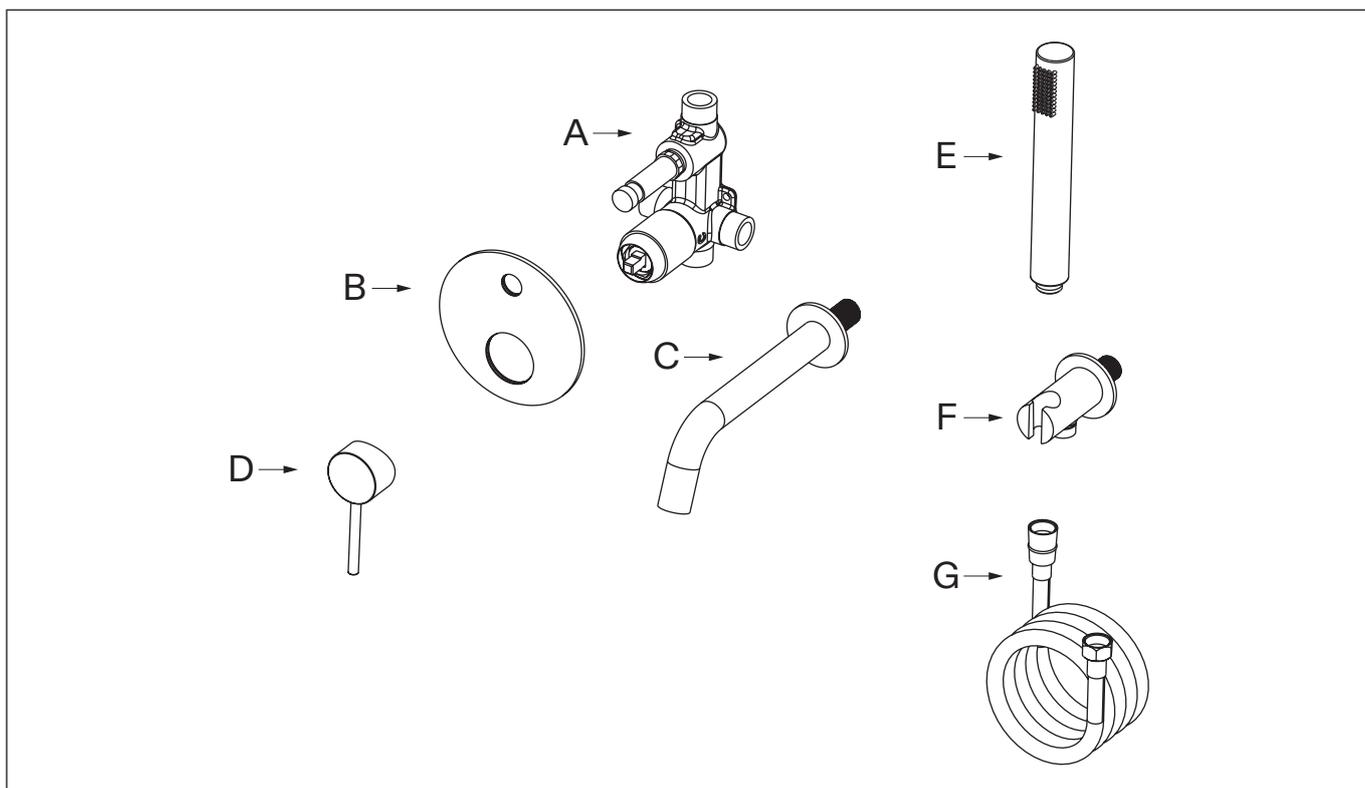




INSTALLATION STEPS

Before installation, please note that this tap is designed for wall mounting only, and we recommend that it is installed by a fully qualified plumber.


It is suitable for use on all boiler systems including pumped, gravity and combination boilers to a maximum pressure of 5 bar - pressure above this may require the fitting of reducer valves.

Please also note that failure to flush your plumbing system as part of the installation process will void the product guarantee. In addition, you must fully test the product before tiling and/or plastering, etc as Lusso will not be held responsible for any costs involved in the removal of the tap if you find there is a fault.

- 1** Carefully check the dimension drawing and mark the position for the tap before removing the sleeves from the shower valve and putting to one side.
- 2** Next, install accessible isolation valves in the hot and cold pipelines for servicing purposes. Please note that the plumbing connections on the inlets and outlets are 1/2" BSP female threads.
- 3** Make a 55 - 70mm deep recess in the wall to house the valve, and then secure the valve into place using the mounting lugs and provided screws. Please ensure that there is no movement on the valve once secured.
- 4** Once the valve is installed, flush the pipework to remove any debris before connecting the hot and cold water to the correct inlets.
- 5** Make the plumbing connections to the outlets, then turn on the water supply and check for leaks.
- 6** Refit the sleeves onto the shower valve and carefully slide the back plates over the lever section - you may wish to use a lubricant to avoid scratching the finish.
- 7** Finally, install the lever and outlet parts.

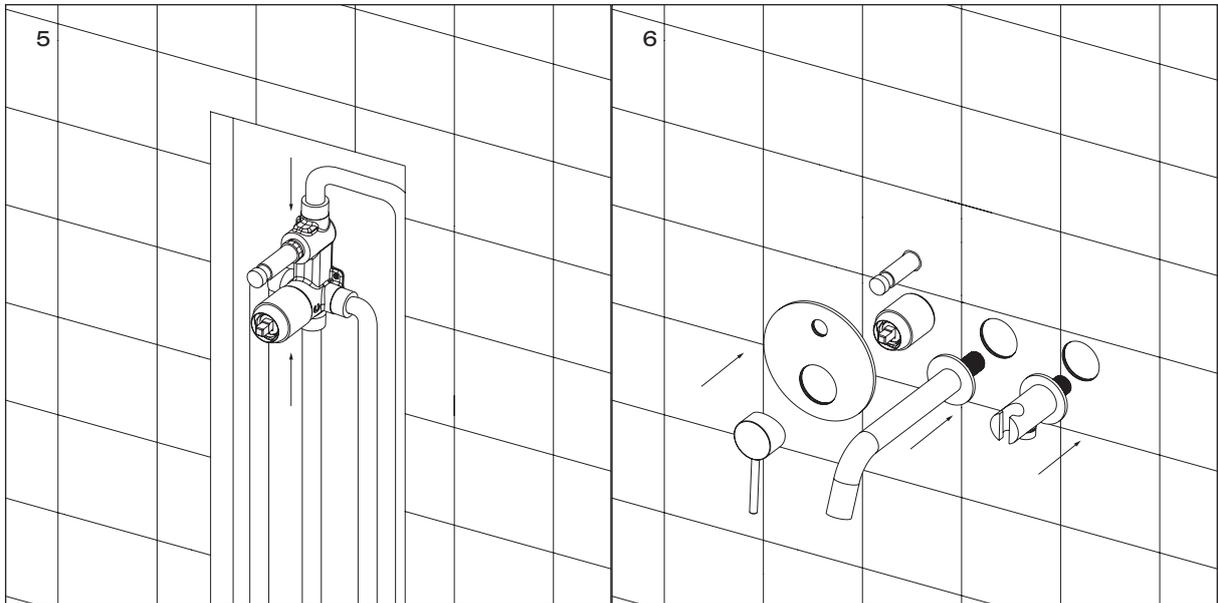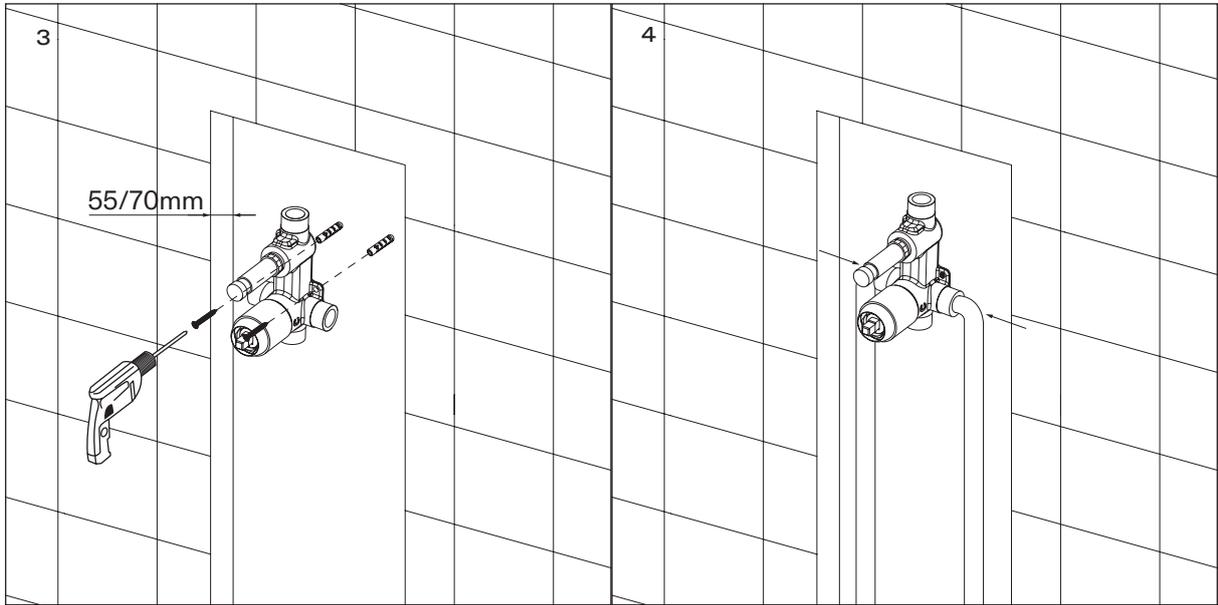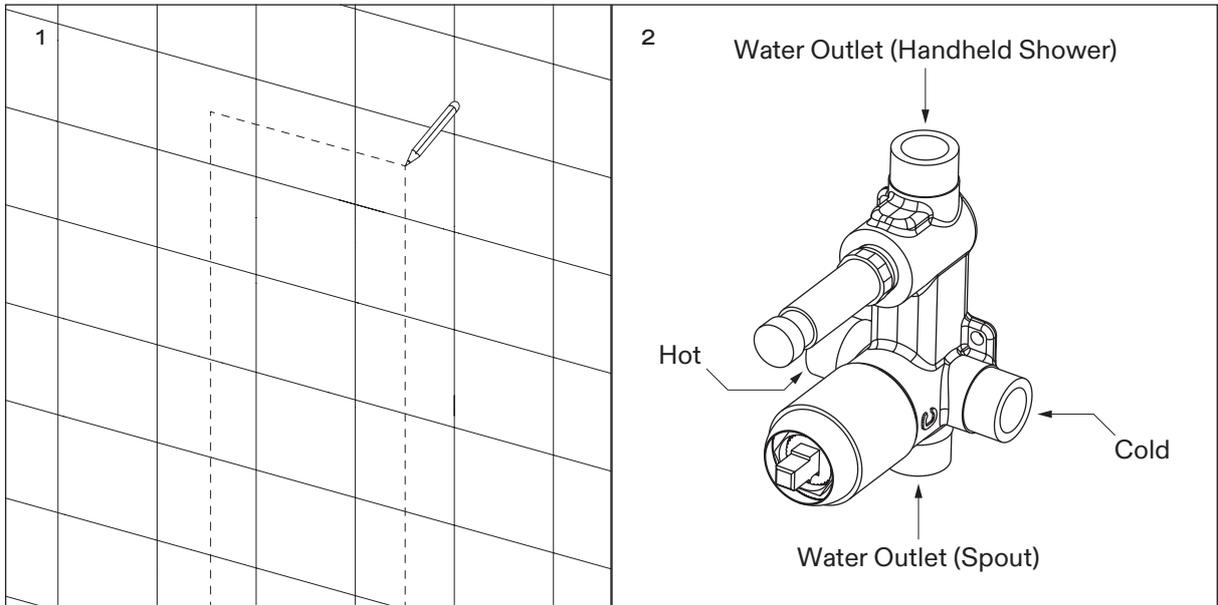

CONTINUED OVERLEAF

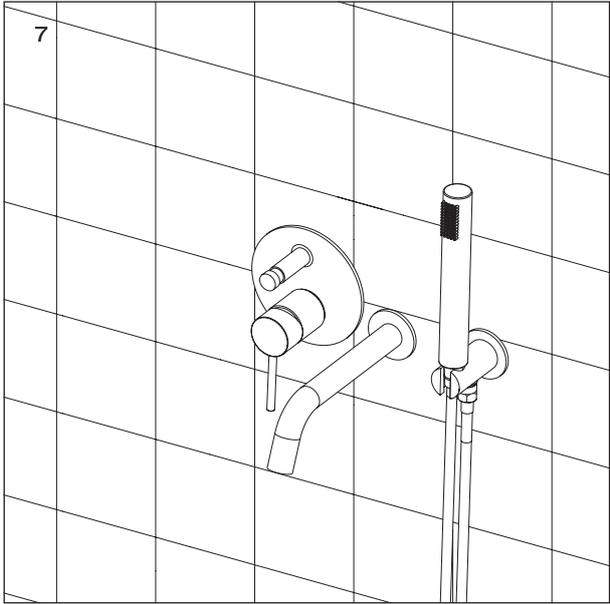

TROUBLESHOOTING

Why is the tap producing hot water when cold is selected, and vice versa?

It's likely that the hot and cold pipes have not been connected the right way around - please check and amend.

There is a leak from the top of the tap - what should I do?

In this instance, the cartridge may have become loose during installation. To tighten it, unscrew the long section of the lever by hand to reveal the hex nut, and unscrew the nut using the provided allen key. Put the lever and the screw aside, remove the dome shaped part, and then tighten the cartridge fixing nut with an adjustable spanner to create a seal and stop the leak. Once complete, reassemble the tap.

What could cause a fluctuating flow rate or low/no flow from the valve?

This may be due to either a blockage in the system, incorrect operating conditions, or a clog in the aerator. To unclog the aerator, simply unscrew it, rinse it with water, and reinstall it - if the problem persists, please consult with a qualified plumber.

How do I replace the cartridge?

Isolate the water to the tap, unscrew the long section of the lever by hand to reveal the hex nut, and unscrew the nut using the provided allen key. Put the lever and the screw aside. Next, remove the dome shaped part, unscrew and remove the cartridge fixing nut, lift out the cartridge, and replace it with a new one - ensuring that the holes are aligned - before reassembling the tap.

CARE INSTRUCTIONS

To clean and maintain the flawless finish of this product, please follow the below instructions. Improper maintenance will void your product guarantee.

✓ Clean with a damp cloth.

✗ Do not use acidic cleansers.

✗ Do not use abrasive cleansers or cloths.

Go to Lusso.com to activate your guarantee.

LUSO

Customer Care: 020 3370 4057

International: +44 20 3370 4057